



**CORTAC™**

## **CTAV Shirt Carrier System (SCS)™**

### **Installation Instructions**

The SCS Pockets are designed to hold the CTAV panels firmly in place and there is minimal “wobble room” or extra space inside the pouch. When installing the CTAV panels for the first time, take your time and gently unroll the CTAV panel and manipulate the CTAV and SCS so the CTAV is properly aligned within the SCS pouches. It will be a tight fit; however, the installation process becomes much quicker as the SCS is worn.

### **Install fully inflated\* CTAV Panels into the SCS:**

1. Lay the shirt on a flat surface
2. Roll the CTAV Panel in half or into a tubular shape with the “fuzzy” loop layer facing outward and the CTAV logo and label facing inward
3. Hold the CTAV panel with one hand and open the pouch with the other hand
4. Push the CTAV panel (inflation valve will be in the lower right corner) into the SCS pouch
5. Once the CTAV has been pushed into the pouch, use one hand to unroll the CTAV and flatten the panel inside the pouch while using the other hand to pull, stretch and manipulate the shirt material and pouch. Pull pouch corner flap to cover CTAV edge

Repeat steps 1-5 for the other side of SCS

\*CTAV Panels WILL NOT fit inside SCS pouches deflated

### **Care Instructions:**

DO NOT MACHINE WASH CTAV PANELS INSIDE THE SCS.

Follow the care instructions on the shirt label.

For additional information, go to:  
[WWW.CORTAC.COM/](http://WWW.CORTAC.COM/)


**#1**



**#2-3**



**#4-5**

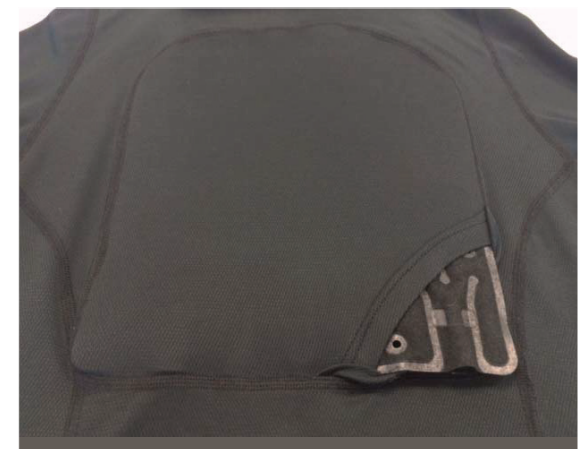

Shirt expressly designed for CORTAC by Massif®  
Massif® is a registered trademark of Massif Mountain Gear Company used under license to CORTAC



## CTAV™ Inflation & Care Instructions

### Inflation Instructions:

Utilize the hand pump supplied with the CTAV to inflate panels. Stop inflating the panel when the bulb no longer presses air into the panel and/or becomes too difficult to pump by hand. **DO NOT INFLATE USING AN AIR COMPRESSOR OR OTHER AIR PUMP NOT SUPPLIED WITH THE CTAV.**

### Care Instructions:

Do not expose to industrial cleaning products or chemicals. Do not bleach. Do not dry clean.

Hand wash with warm water and a mild detergent, then rinse with warm water and allow to air dry in a ventilated area.

To register your product, go to:

<http://www.cortac.com/about/product-registration/>

### LIMITATIONS OF WARRANTIES

EXCEPT AS SPECIFICALLY WARRANTED IN THIS DOCUMENT FOR REPLACEMENT OF THE PRODUCTS BASED UPON DEFECTIVE MATERIALS OR WORKMANSHIP, CORTAC, SPECIFICALLY EXCLUDES AND DISCLAIMS ALL OTHER EXPRESS AND IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL CORTAC BE LIABLE FOR ANY DIRECT, INDIRECT, PUNITIVE, INCIDENTAL, SPECIAL, CONSEQUENTIAL OR OTHER DAMAGES, COSTS OR EXPENSES, INCLUDING ATTORNEYS' FEES, RESULTING FROM OR IN ANY WAY CONNECTED WITH THE USE OR PERFORMANCE OF THE PANELS OR CARRIERS OR ANY ASPECT THEREOF, WHETHER BASED ON CONTRACT, TORT, NEGLIGENCE, STRICT LIABILITY OR OTHERWISE, EVEN THOUGH PERSONAL INJURY OR DEATH COULD RESULT IF A DEFECT IN MATERIALS OR WORKMANSHIP OCCURS, AND EVEN IF CORTAC HAS BEEN ADVISED OF THE POSSIBILITY OF ANY OF THE FOREGOING DAMAGES. BECAUSE SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF LIABILITY FOR SOME OR ALL OF THE FOREGOING DAMAGES, YOU AGREE THAT ALL ISSUES RESPECTING THE INTERPRETATION AND ENFORCEMENT OF WARRANTY CLAIMS AND RESULTING DAMAGES SHALL BE DETERMINED EXCLUSIVELY IN THE COURTS OF THE STATE OF TENNESSEE AND SHALL BE GOVERNED SOLELY BY THE LAWS OF THE STATE OF TENNESSEE.



**CORTAC™**

### HEADQUARTERS

75 New Shackle Island Rd., Suite 2  
Hendersonville, TN 37075

Tel: +1 888.939.5969

[www.cortac.com](http://www.cortac.com)

## CTAV™ Retrofit Kit™

### Installation Instructions:

#### Tactical, Concealable & Outer Vest Carriers

For optimal performance of the adhesive backed hook tape, apply to a clean & dry armor carrier. Install hook tape at least 18 hours before wearing the body armor with CTAV Retrofit Kit. Do not install hook tape onto CTAV panel, then push CTAV panel onto armor carrier.

#### Install fully inflated CTAV Panels:

1. Lay armor on a flat surface exposing the torso-facing side of the carrier
2. Inflate the CTAV panels and check for proper fit & placement. Remove CTAV panels.
3. Cut the hook tape to length equal to, but not less than,  $\frac{2}{3}$  of the CTAV panel length
4. Peel the hook tape from the paper backing and place on the carrier vertically near the left and right edge of where the CTAV panel will be placed. Push the hook tape firmly onto the carrier
5. After 18 hours, place CTAV panels onto carrier and wear armor as usual

#### \*Exposed Loop Inside Carrier

Stick two pieces of hook tape together to create a double-sided hook. Place double-sided hook onto the exposed loop.

#1-2



#3-4



#5



LOOP

